


Safety Instructions for Installation, Operation and Maintenance of ABO Knife Gate Valves Series 200 and 300

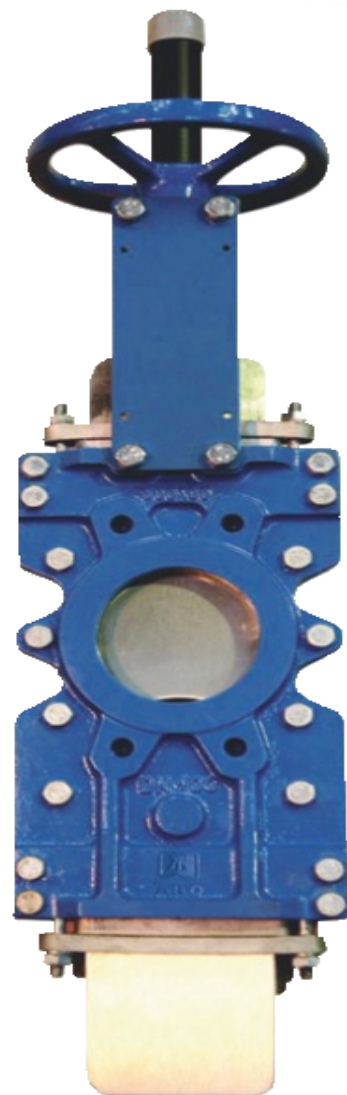



CAUTION

1. All safety instructions should be read carefully; otherwise all manufacturer's warranties become null and void. All installation work and activities during the operation or removal of the valve must be performed by professionally trained staff. The manufacturer is available for any questions – see contact details.



DANGER TO LIFE

2. The valve may only be used if the medium pressure and temperature parameters comply with the type specifications for the type of valve concerned.



DANGER TO LIFE

3. It is necessary to ensure that the material of valve components that comes into contact with the transported medium is suitable for the medium concerned.



DANGER TO LIFE

4. Before dismantling the valve from the piping, the piping must be without pressure both before and after the valve. (Risk of uncontrollable leak of fluid).



DANGER

5. Using levers or similar devices that allow exceeding the control torque is not permitted while controlling the valve.



WARNING

6. Before installing the valve, the flanges and the interior of the piping must be free of scale, slag, etc.